



11636 GOLDRING RD • ARCADIA, CALIFORNIA 91006-5815  
626-358-2559 • FAX 626-359-5701 • 800-525-6925

**Instructions**  
**LANLOC™**  
**Locks for LANs and other RJ-45 Modular Plugs**

The LANLOC™ helps secure your Local Area Network (LAN) or other RJ-45 modular connections. Once installed, it cannot be removed without destroying the LANLOC™ or attached equipment.

Changing your connections is easy, if you have a replacement LANLOC™. Just cut the existing LANLOC™ out, make your changes, and secure with a replacement LANLOC™. No special tools are needed.

Ask about our MODLOC™ for securing your RJ-11 and handset modular connections.

**To Install:** (see diagram on back of card)

1. Using diagonal cutters or other suitable tool, remove the locking tab on your modular plug as shown in drawing.
2. Slide LANLOC™ into jack on top of modular plug, make sure it “snaps in”.

**To Remove or Change:**

1. Cut along the two grooves on the top of the LANLOC™. Pull out the pieces.
2. Make your changes.
3. Reinstall modular plug with new LANLOC™ as above.

US Patent 5,556,295


**Instructions**  
**LANLOC™**  
**Locks for LANs and other RJ-45 Modular Plugs**



US Patent No. 5556295


**REMOVAL OF LATCH FROM MODULAR PLUG**

CUT TAB AT HINGE & REMOVE

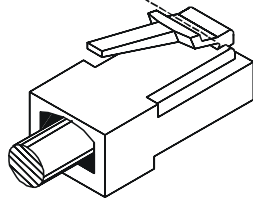


MODULAR PLUG BEFORE LATCH REMOVAL

BROKEN EDGE

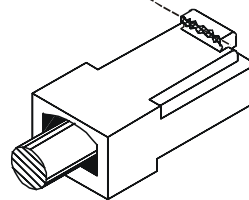

MODULAR PLUG AFTER LATCH REMOVAL

**INSTALLATION OF LANLOC™**

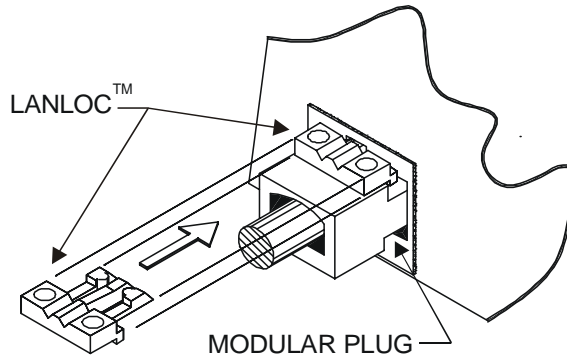

[WWW.DynaMetric.COM](http://WWW.DynaMetric.COM)

800-525-6925 626-358-2559  
MONROVIA, CA. USA