



11636 GOLDRING RD • ARCADIA, CALIFORNIA 91006-5815  
626-358-2559 • FAX 626-359-5701 • 800-525-6925

### Instructions for TBR-10 Family Telephone Beep Inserter Inline, Phone Powered

The TBR-10 inserts a beep every 15 seconds on your phone call. The beep is heard by everyone on the call. The unit is powered by the phone, so no separate power supply is needed.

The unit plugs in between the coil cord and the phone base, and will insert a beep on the call whenever the handset is Off-Hook.

#### INSTALLATION (See Diagram)

- 1 Unplug the coil cord from the base of the telephone and plug it into the modular jack on the TBR-10.
- 2 Plug the modular plug on the cord of the TBR-10 into the modular jack on the telephone base where the coil cord was plugged in.
- 3 Adjust the beep volume if necessary with the Beep Volume Adjust as shown using a small screwdriver.
- 4 The unit is intended to be left free between the coil cord and the phone base. Alternately, it may be mounted with an adhesive pad to a convenient location on the phone or desk.

	Different Connections	Louder Beep	Quieter Beep	Low Loading	Beep Timing Sec
TBR-10					15
TBR-10-5S					5
TBR-10-5SN			X		5
TBR-10BI	X				15
TBR-10EX	X				15
TBR-10G	X				15
TBR-10G-5S	X				5
TBR-10GR	X	X			15
TBR-10KN			X		30
TBR-10LB					200
TBR-10N			X		15
TBR-10NN			XX		15
TBR-10R		X			15
TBR-10R-5S		X			5
TBR-10SP	X				15
TBR-10Z				X	15
TBR-10ZG	X			X	15
TBR-10ZN			X	X	15

