

The CSP-2 is a Kit Consisting of:  
1 TMP-636 Telephone Patch  
1 CSP CD  
1 Software Registration Code

11636 GOLDRING RD • ARCADIA, CALIFORNIA 91006-5815  
626-358-2559 • FAX 626-359-5701 • 800-525-6925

### **Installation Instructions for Call Saver® Pro™ CSP-2 Telephone Recording & Playback Kit**


The CSP-2 Telephone Recording & Playback Kit lets you to record and play back to your telephone from your PC using the included Call Saver® Pro™ software. The TMP-636 Telephone Recorder Patch connects to the telephone via the modular handset connector as detailed below.

#### **INSTALLATION INSTRUCTIONS**



- 1 Unplug the coil cord from the base of the phone and plug it into the Handset jack on the TMP-636.
- 2 Plug the short cable from the TMP-636 into the phone base where the coil cord was plugged.
- 3 Insert the 3.5mm GREEN stereo plug into the speaker or headphone jack on the sound card.
- 4 Insert the 3.5mm PINK stereo plug into the MIC jack on the sound card.
- 5 Insert the Call Saver Pro disk into your computer's disk drive and follow the automated instructions to install the software on your PC.

**Installation Instructions for Call Saver® Pro™  
CSP-2 Telephone Recording & Playback Kit**

Pink Plug  
plugs into PC  
MIC Jack

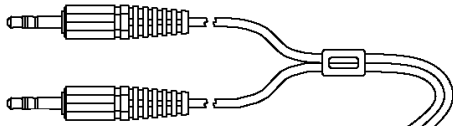

Green Plug  
plugs into PC  
Speaker Jack

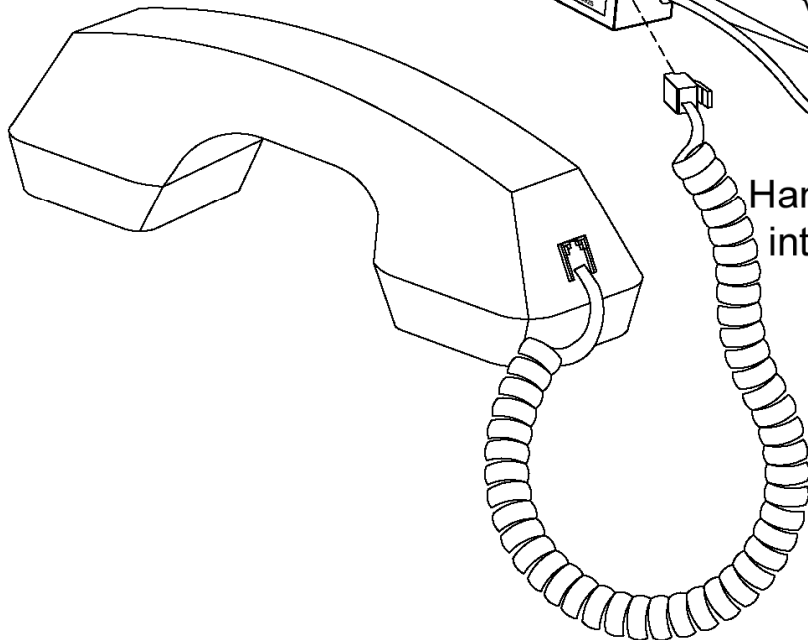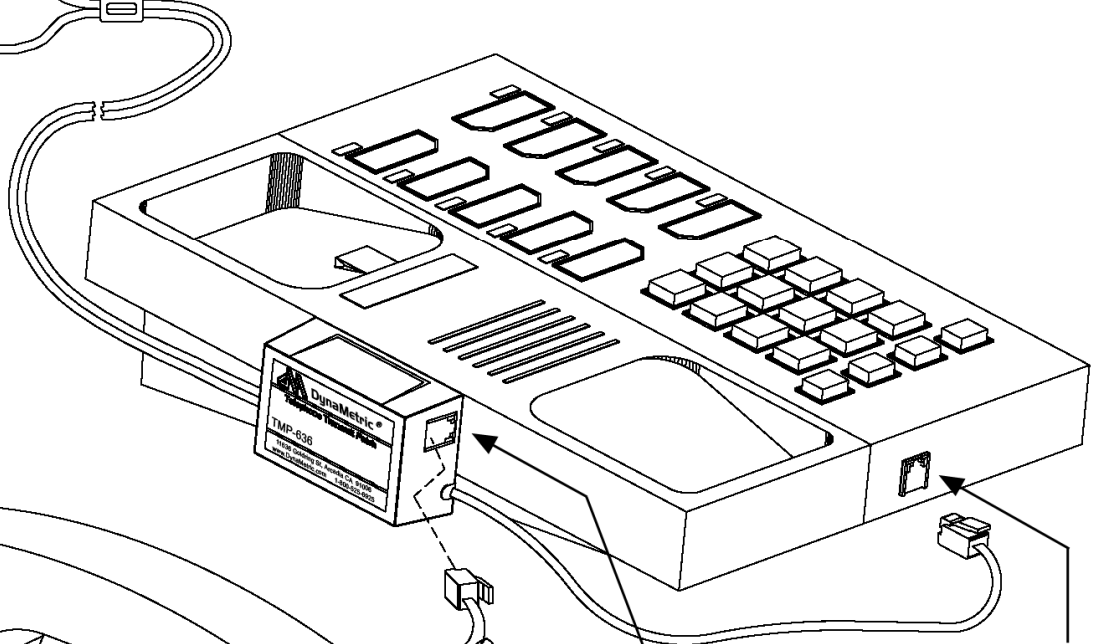

Handset plugs  
into Adapter

Adapter plugs into  
Handset Jack