

The CSP-4 is a Kit Consisting of: 1 TLP-303 Beeping Telephone Patch 1 CSP CD 1 Software Registration Code

11636 GOLDRING RD • ARCADIA, CALIFORNIA 91006-5815 626-358-2559 • FAX 626-359-5701 • 800-525-6925

Installation Instructions for Call Saver[®] Pro™ CSP-4 Telephone Recording Kit with Beeps


The CSP-4 Telephone Recording Kit lets you record your telephone calls on your computer. It provides clear recordings of both sides of your phone conversations, and provides a beep every 15 seconds. An ON/OFF switch turns off the beeps when desired (the audio output to the soundcard is always ON). Use a small screwdriver to adjust the beep volume through the small hole in the bottom of the unit. The TLP-303 Telephone Recorder Patch connects to the telephone via the modular handset connector as detailed below.

INSTALLATION INSTRUCTIONS

- 1 Unplug the coil cord from the base of the phone and plug it into the Handset jack on the TLP-303.
- 2 Plug the short cable from the TLP-303 into the phone base where the coil cord was plugged.
- 3 Plug the pink plug on the long cable into the MIC jack on your computer.
- 4 Plug the AC adapter into a 115VAC 60Hz outlet.
- 5 Plug the AC adapter cord into the TLP-303.
- 6 Insert the Call Saver Pro disk into your computer's disk drive and follow the automated instructions to install the software on your PC.

Follow the instructions included in the Call Saver[®] Pro[™] software for recording with your PC.



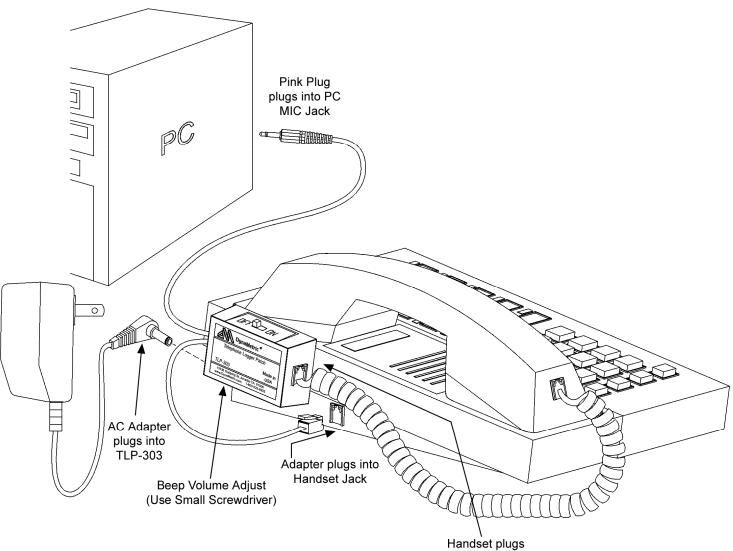

into Adapter