



11636 GOLDRING RD • ARCADIA, CALIFORNIA 91006-5815
626-358-2559 • FAX 626-359-5701 • 800-525-6925

Instructions
MODLOC™ KIT
Locks for Telephone Cord Modular Plugs
P/N 43506, 43549, 43559, 43565

The MODLOC™ helps secure your modular connections. Once installed, it cannot be removed without destroying the MODLOC™ or attached equipment. MODLOC™s are available in handset coil cord (clear color) and RJ-11 line cord (smoke color) sizes.

Changing your connections is easy, if you have a replacement MODLOC™. Just cut the existing MODLOC™ out, make your changes, and secure with a replacement MODLOC™. No special tools are needed.

Ask about our LANLOC™ for securing your Local Area Network (LAN) or other RJ-45 modular connections.

To Install: (see diagram on back of card)

1. Using diagonal cutters or other suitable tool, remove the locking tab on your modular plug as shown in drawing.
2. Slide MODLOC™ into jack on top of modular plug, make sure it “snaps in”.

To Remove or Change:

1. Cut along the two grooves on the top of the MODLOC™. Pull out the pieces.
2. Make your changes.
3. Reinstall modular plug with new MODLOC™ as above.

MODLOC™
Patent 5,556,295


Instructions
MODLOC™ KIT
Locks for Telephone Cord Modular Plugs
P/N 43506, 43549, 43559, 43565



US Patent No. 5556295


REMOVAL OF LATCH FROM MODULAR PLUG

CUT TAB AT HINGE & REMOVE

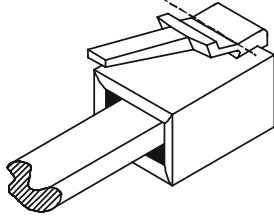



MODULAR PLUG BEFORE
LATCH REMOVAL

BROKEN EDGE

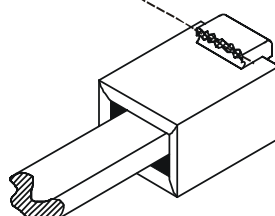

MODULAR PLUG AFTER
LATCH REMOVAL

INSTALLATION OF MODLOC™

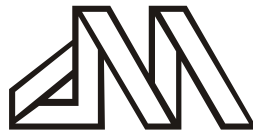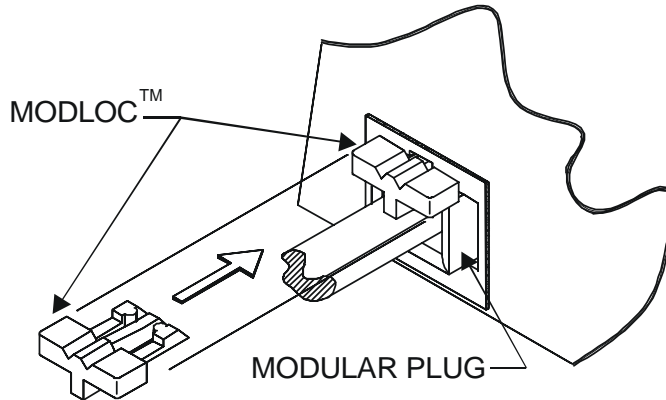

WWW.DynaMetric.COM

800-525-6925 626-358-2559